



Deutsch DT / DTM Series Raychem Boot Cross Reference


Below you will find Raychem/TE heat shrinkable boots that are known to work with Deutsch DT / DTM series connectors.

DTM SHRINK BOOT RECOMMENDATION		
Position	**Pin Side / Std Receptacle	*Socket Side E007
2	204W511-25-0	202A111-25-0
3	202K111-25-0	202K111-25-0
4	202K232-25-0	202A111-25-0 or 202K111-25-0
6	202K232-25-0	202K232-25-0 Remove 1 Lip
8	202K232-25-0	202K232-25-0
12	202K232-25-0	202K232-25-0
DT SHRINK BOOT RECOMMENDATION		
Position	**Pin Side / Std Receptacle	*Socket Side E008
2	204W511-25-0	202K111-25-0
3	202K232-25-0	202K232-25-0 Remove 1 Lip
4	202K232-25-0	202K232-25-0 Remove 1 Lip
6	202K232-25-0	204W511-25-0
8	202K232-25-0	202K232-25-0
12	202A142-25-0	202A132-25-0
ADHESIVES FOR BOOTS		
RT125	Adhesive Applicator	Adhesive Kit

- * When installing a shrink boot on the plug side your connector will need to have the shrink boot lipped modification. The shrink boot lip modification is denoted by the last numbers in the part number string, see below
 - DT series E008, CE12,CE04,EP20
 - DTM series: E007,EE03
 - all recommendations above and the images in the following pages are using E007 and E008 modifications on the DT06 plug side.
- ** When installing a shrink boot on the receptacle side we use the standard DT04 receptacle **without** the shrink boot modification. The shrink boot modification can be used, please refer to the socket side of the chart for boot recommendations.

DT Series Boot Images

Raychem TE Shrink Boots For DT Series Connectors

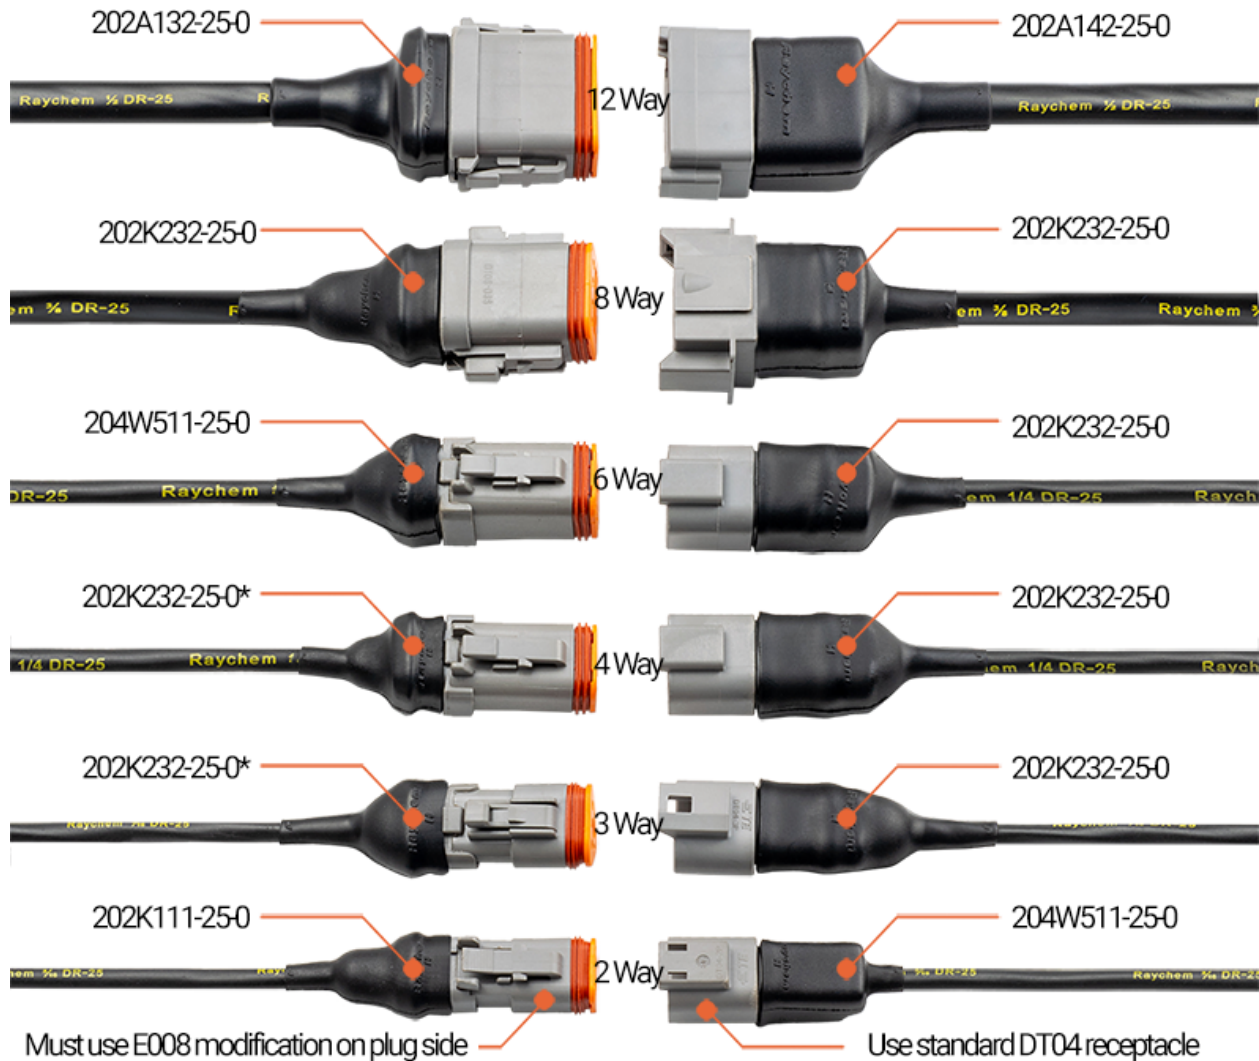


* Remove first lip of boot

SEARCH BOOT PART NUMBER ON PROWIREUSA.COM

DTM Series Shrink Boot Images

Raychem TE Shrink Boots For DTM Series Connectors

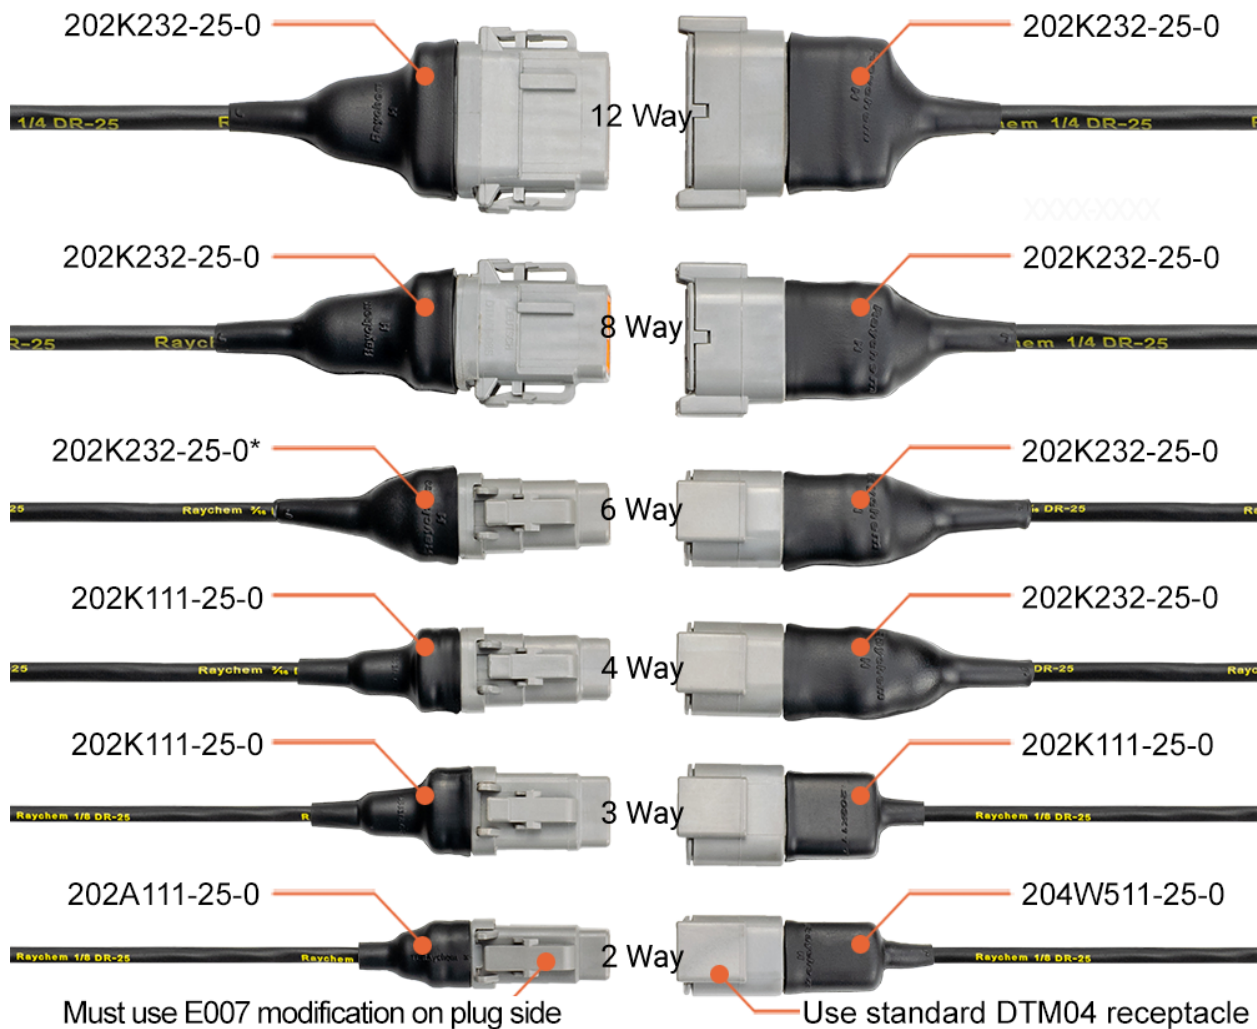

* Remove first lip of boot SEARCH BOOT PART NUMBER ON PROWIREUSA.COM